

DOC vehicle decal installation guide

Step 1:

Clean the area thoroughly using either IPA alcohol or soap and water.

Do not use cleaners or similar products because it will leave a residue behind that will prevent the decal from adhering well.



Step 2:

Peel the paper backing off the decal.

Step 3:

Slowly lower the decal onto the surface and rub it in place firmly with a squeegee or credit card.

The decal has a special air release backing so any air pockets trapped under it should smooth out when rubbed with a squeegee.

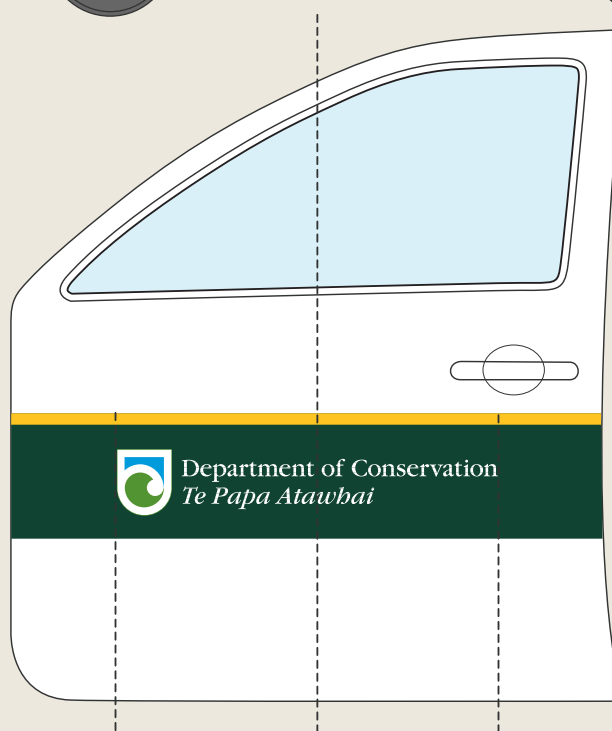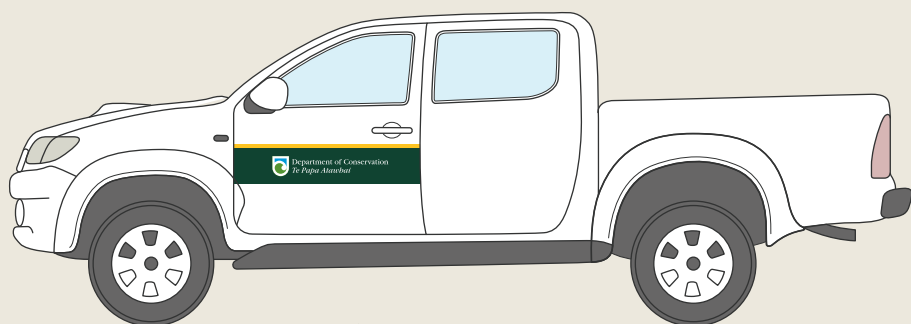

200 mm

The sign starts at the door handle and finishes at the body crease/ moulding.

Width of sign varies according to door size. Centre corporate signature on front door panel.

The decal is supplied at 1300 mm x 200 mm. Trim off excess if too long and smooth down edges. The decal should be applied to both front doors.



Department of Conservation
Te Papa Atawhai